






ИБП Eaton Comet EXtreme 12 kVA Tower - Инструкция по установке и эксплуатации Comet EXtreme


Постоянная ссылка на страницу: <https://eaton-power.ru/catalog/mge-comet-extreme/comet-extreme-12-kva-to>

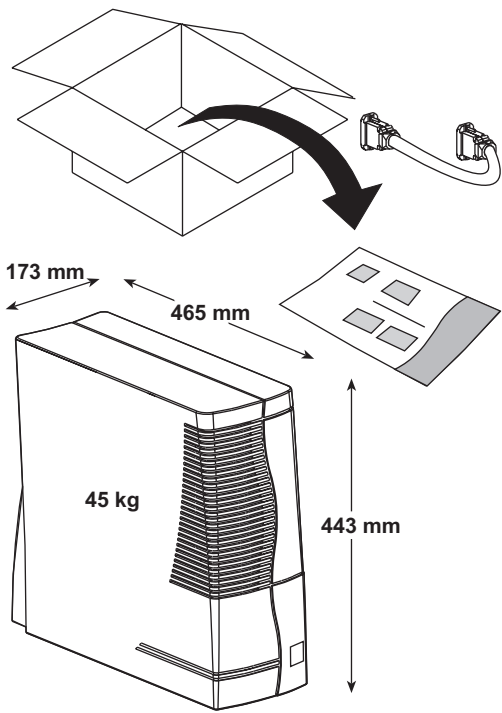


1A 4.5 / 6 kVA 2A

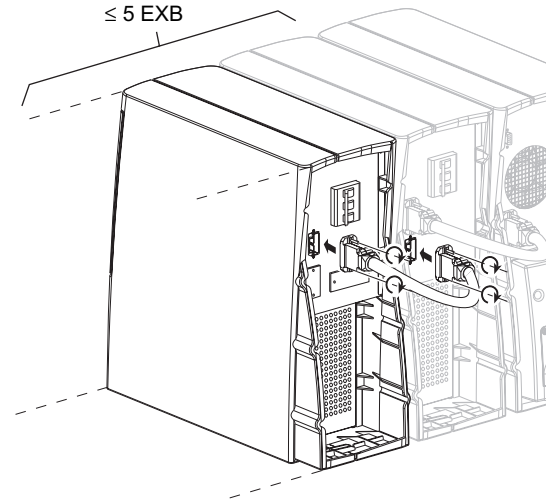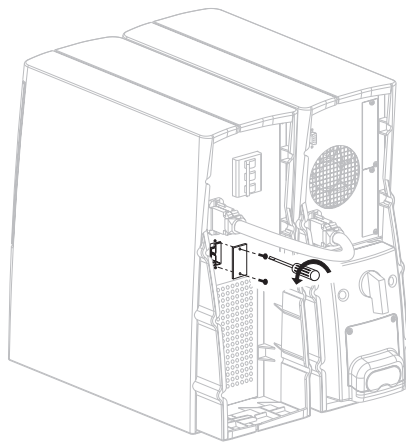


1B 12 kVA

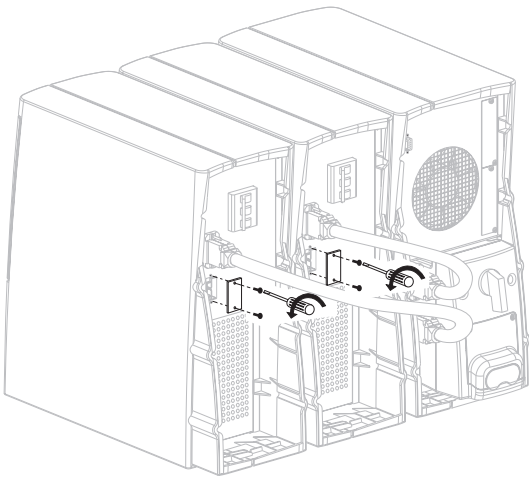


2B

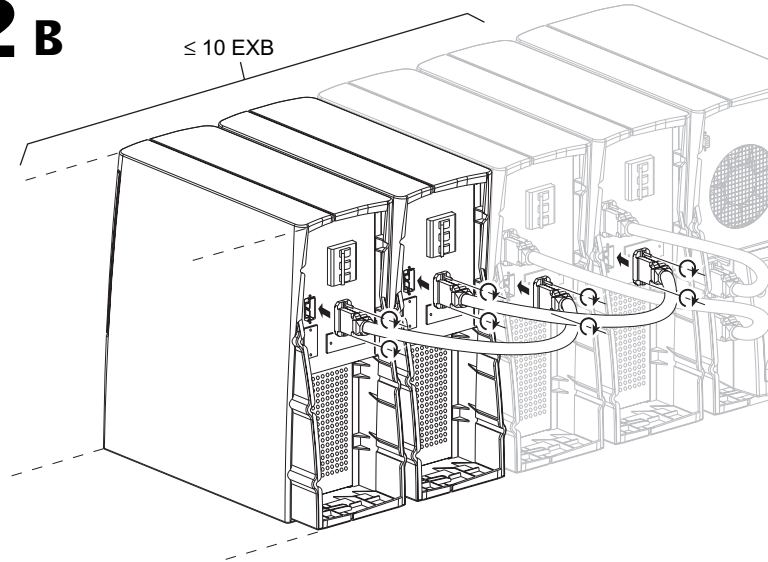


Connection indications must be imperatively respected.
Respecter impérativement les indications de raccordement.

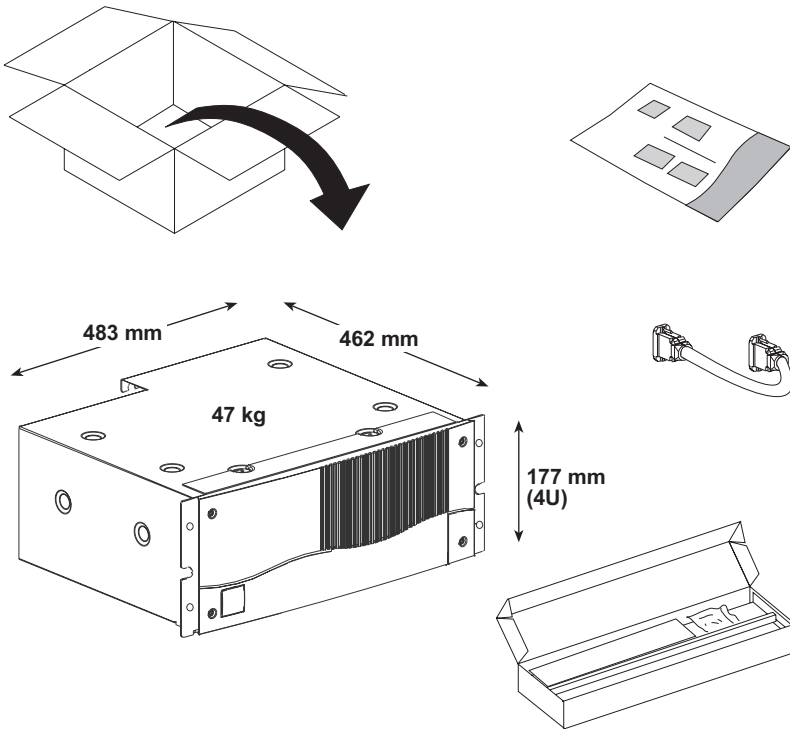


2A 4.5 / 6 kVA (Rack)

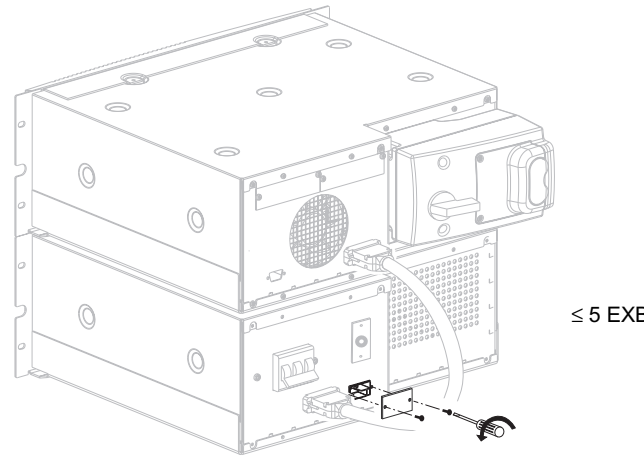

2B 12 kVA (Rack)

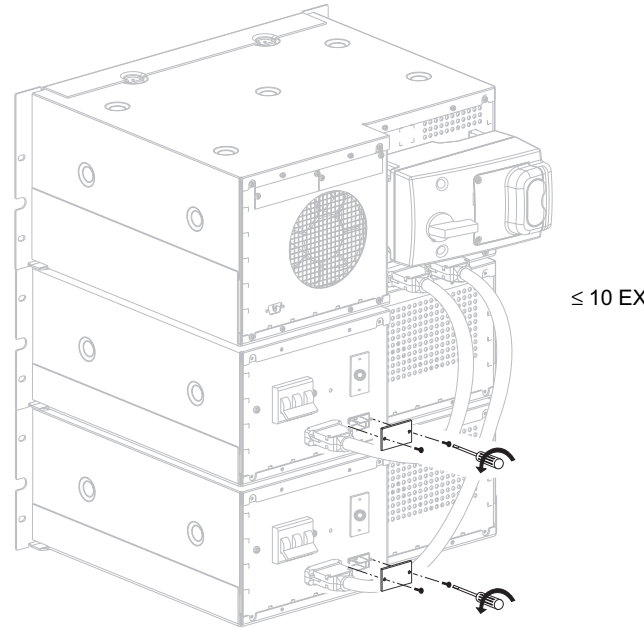


1

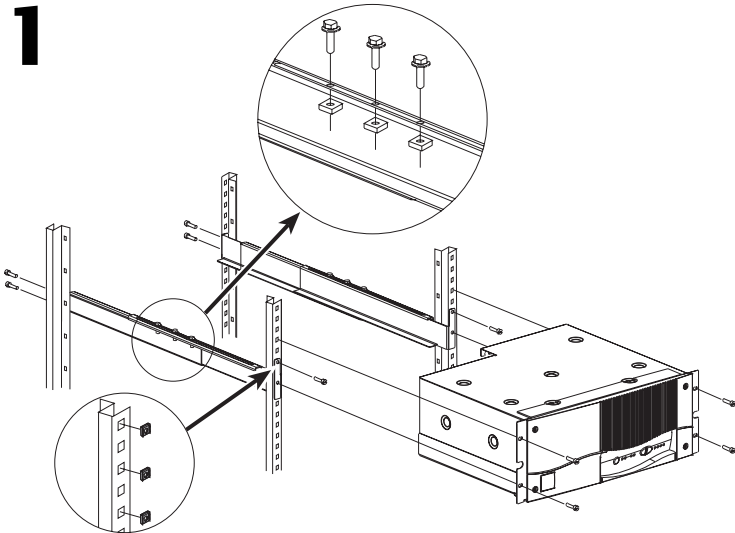


! Connection indications must be imperatively respected.
Respecter impérativement les indications de raccordement.

Emergency off button connection (option) Raccordement du bouton d'arrêt d'urgence (option)


1

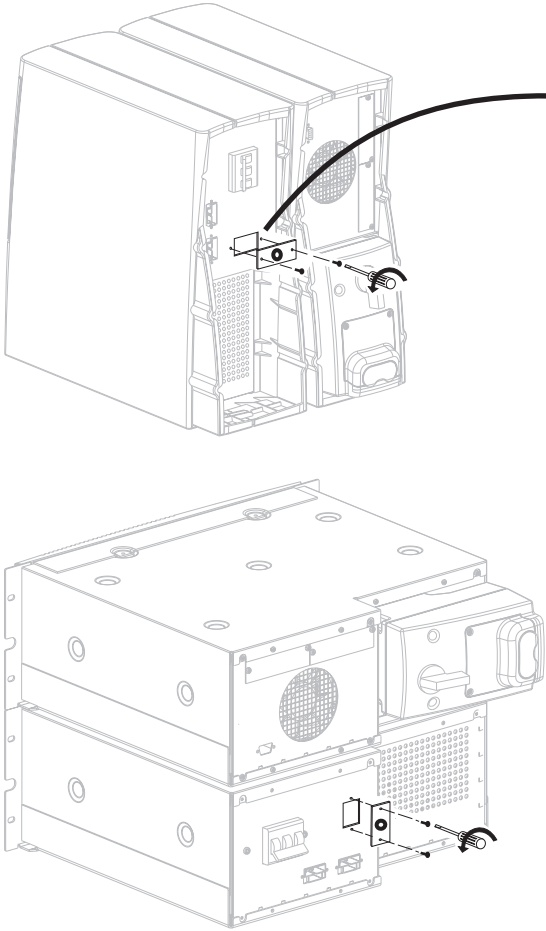

2

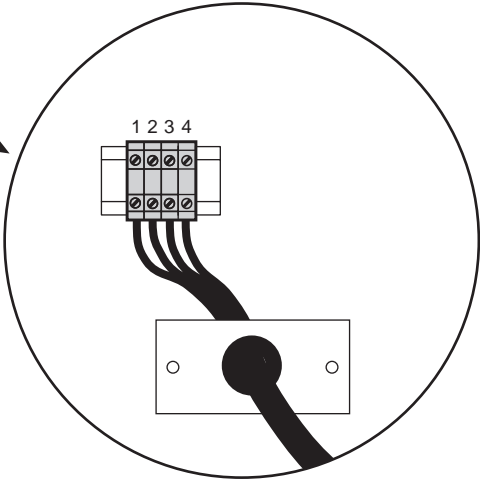

3

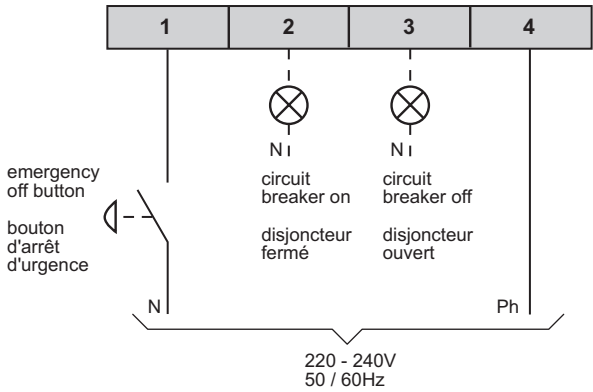

MGE U

140, Ave
ZIRST - M
38334 -

Interne

