






ИБП Eaton Comet EXtreme 4,5 kVA Tower - Инструкция по установке и эксплуатации Comet EXtrem


Постоянная ссылка на страницу: <https://eaton-power.ru/catalog/mge-comet-extreme/comet-extreme-4-5-kva-t>

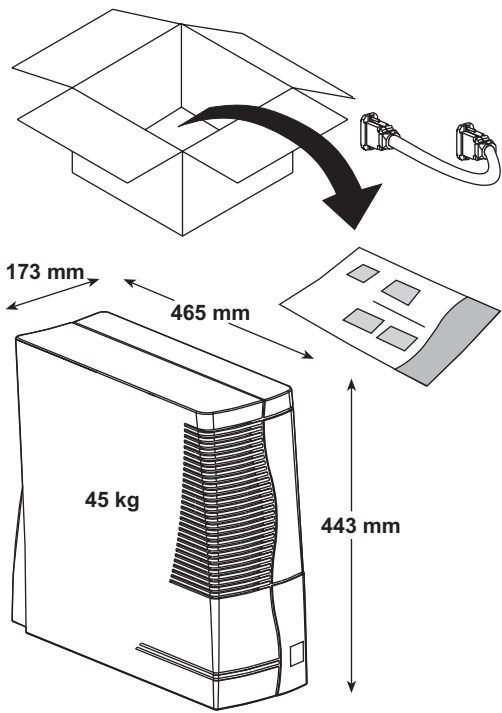


# 1A 4.5 / 6 kVA 2A

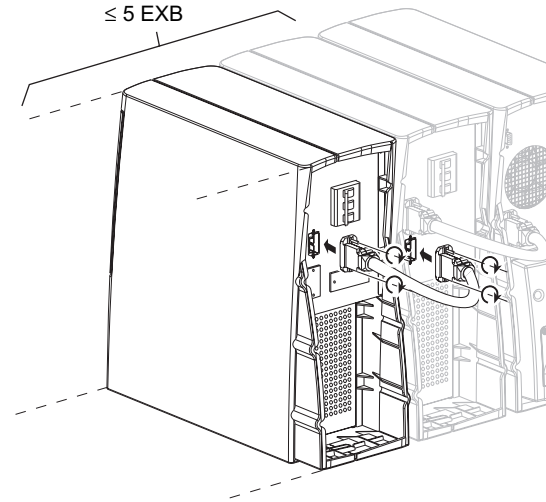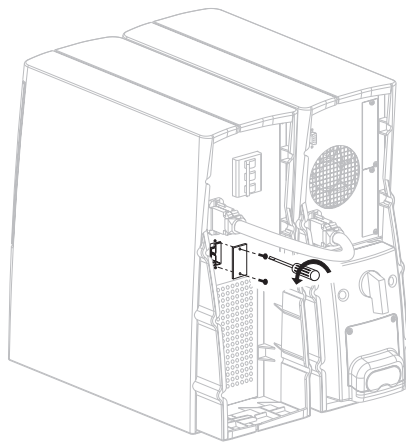


# 1B 12 kVA

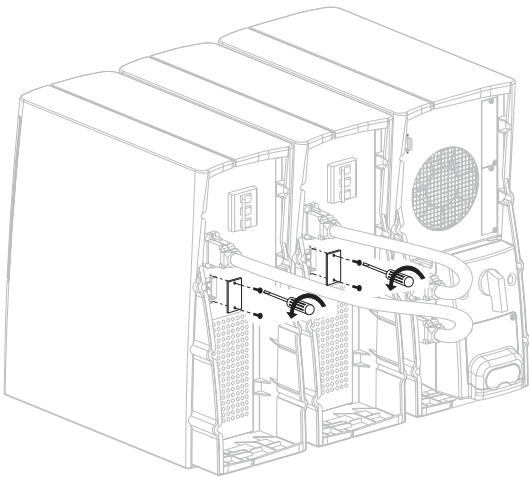


# 2B

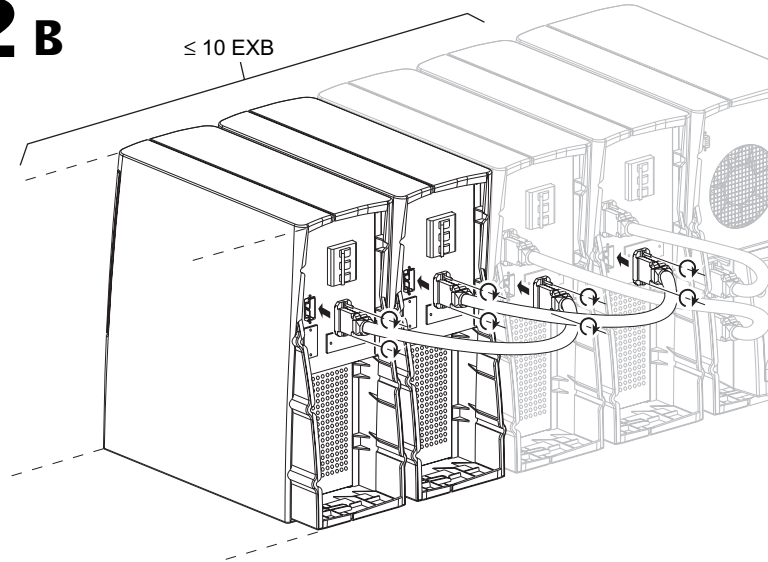


Connection indications must be imperatively respected.  
Respecter impérativement les indications de raccordement.

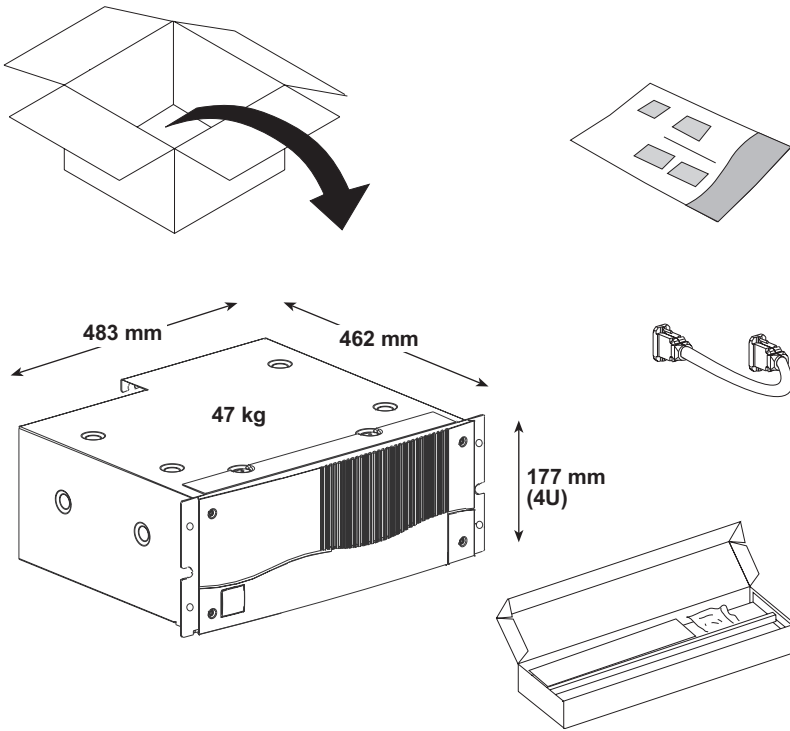


## 2A 4.5 / 6 kVA (Rack)

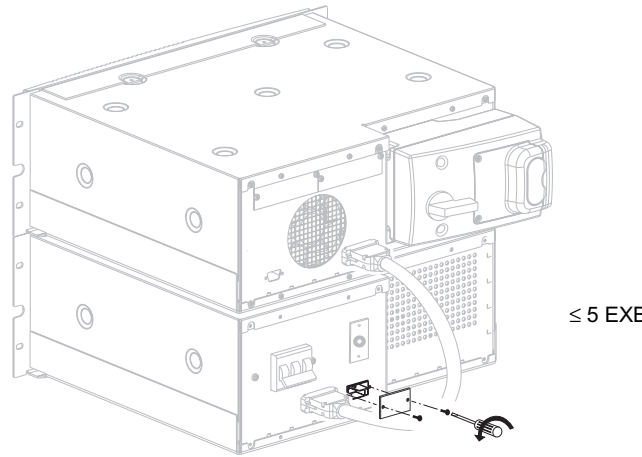

## 2B 12 kVA (Rack)

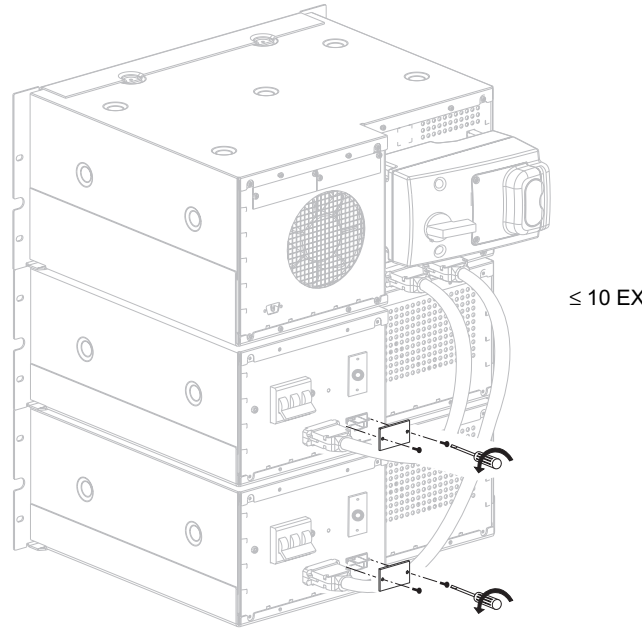


1

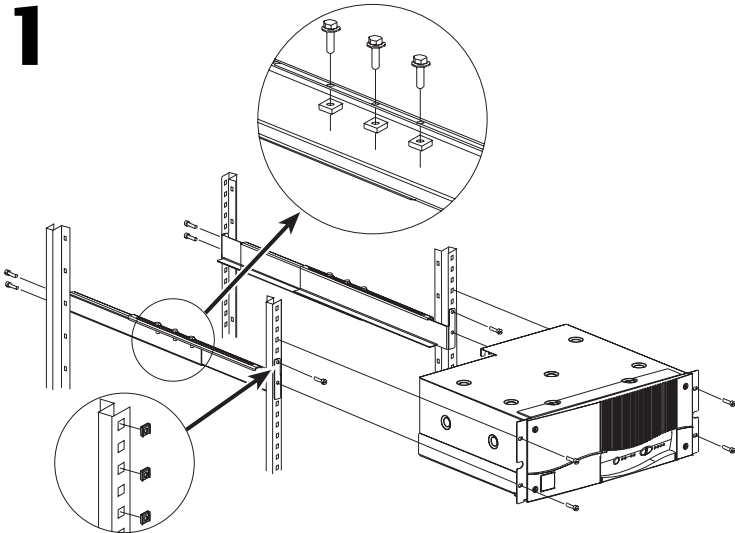


**!** Connection indications must be imperatively respected.  
Respecter impérativement les indications de raccordement.

# Emergency off button connection (option) Raccordement du bouton d'arrêt d'urgence (option)


1

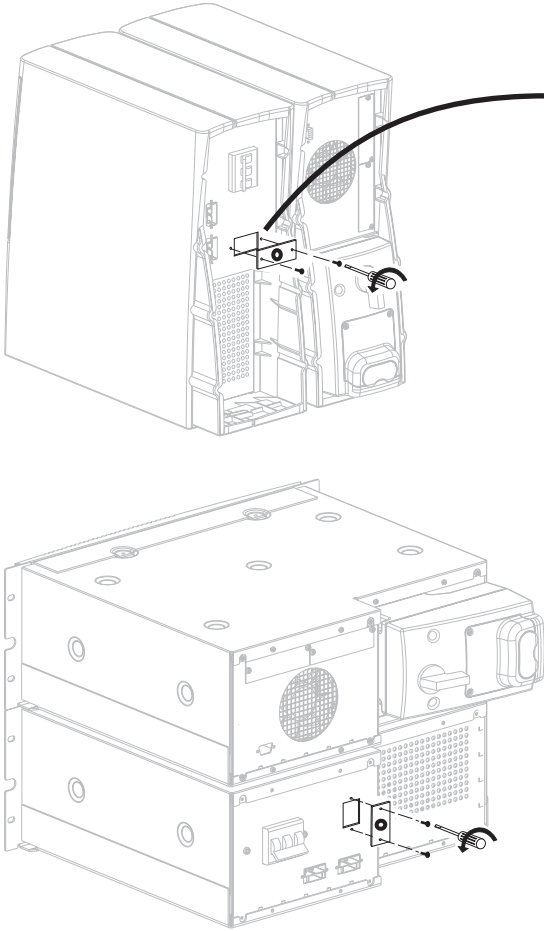

2

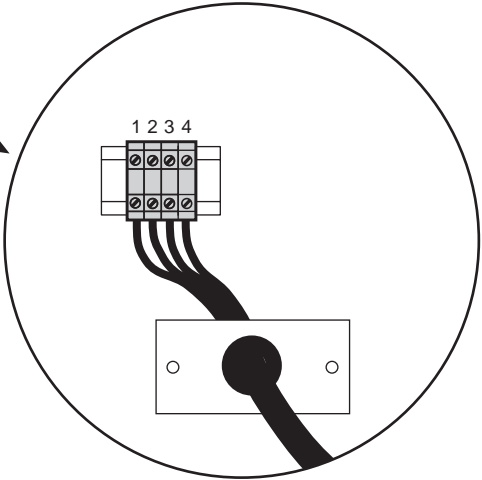

3

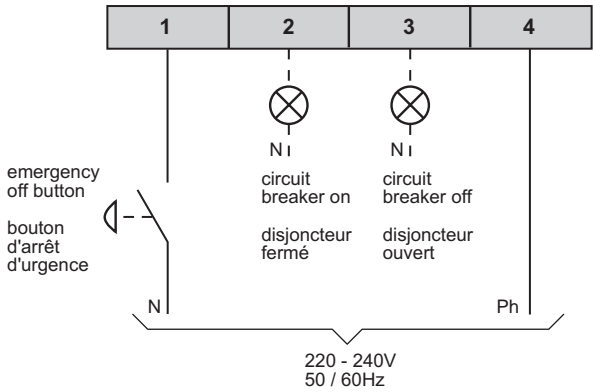

**MGE U**

140, Ave  
ZIRST - M  
38334 -

**Interne**

